


A16	ABS control module
K38	ABS relay
H29	ABS warning lamp
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
X1	Data link connector (DLC)
EP	Earth point
A35	Engine control module (ECM)
X102	Engine speed (RPM) connector
X96	Fascia illumination connector
F	Fuse
X28-I	Fuse box/relay plate, fascia 1
X28-III	Fuse box/relay plate, fascia 3
Y22	Hydraulic modulator
15	Ignition switch - ignition ON
A5	Instrument panel
A75	Instrumentation control module
A178	Navigation system control module
M61	Pump motor
K100	Pump motor relay
S212	Traction control master switch
A61	Traction control module
H99	Traction control warning lamp
A57	Transmission control module (TCM)
B19	Wheel speed sensor, left front
B21	Wheel speed sensor, left rear
B20	Wheel speed sensor, right front
B22	Wheel speed sensor, right rear



bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

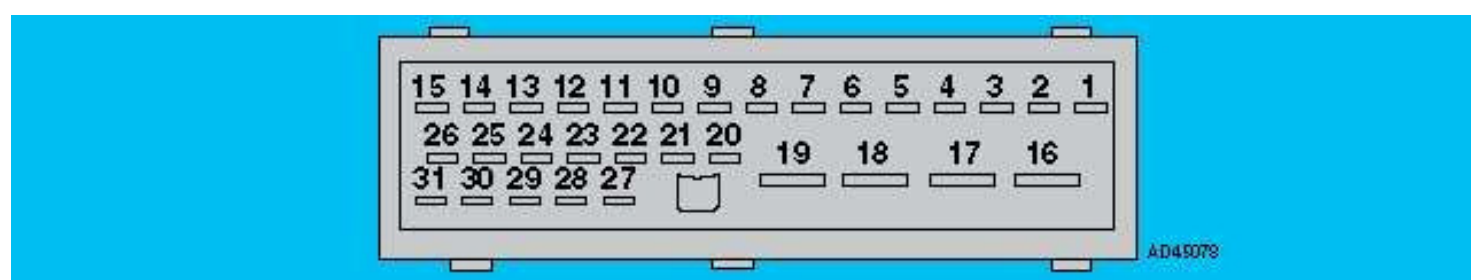