


## Exploded view - steering wheel

### 1 - Steering column electronics control unit -J527-

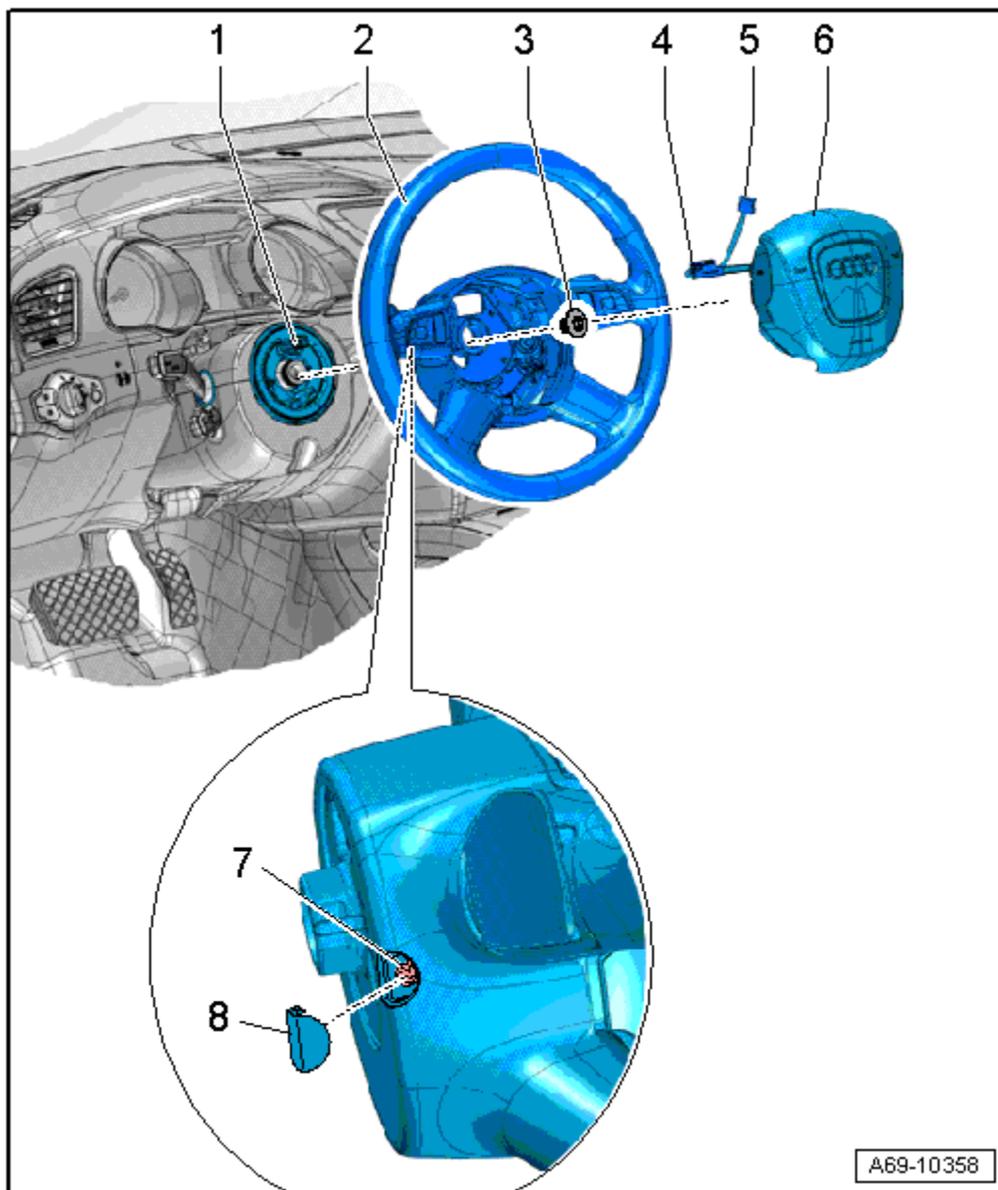

- Removing and installing → Electrical system; Rep. gr.94; Steering column switch module; Removing and installing steering column electronics control unitJ527

### 2 - Airbag steering wheel

- Removing and installing → Chapter

### 3 - Bolt

- 50 Nm
- Always renew if removed

### 4 - Electrical connector

### 5 - Electrical connector

### 6 - Driver's airbag unit

- Removing and installing → General body repairs, interior; Rep. gr.69; Airbag (driver side); Removing and installing airbag unit with igniters

**WARNING**

**Observe safety precautions for working on airbags → General body repairs, interior; Rep. gr.00; Safety precautions; Safety precautions when working with pyrotechnic components.**

**7 - Locking bar**

- Releasing → General body repairs, interior; Rep. gr.69; Airbag (driver side); Removing and installing airbag unit with igniters

**8 - Trim cap**

- Not fitted on this model