



Removing and installing rear shelf with sun blind

Special tools and workshop equipment required

- ♦ Removal wedge -3409-

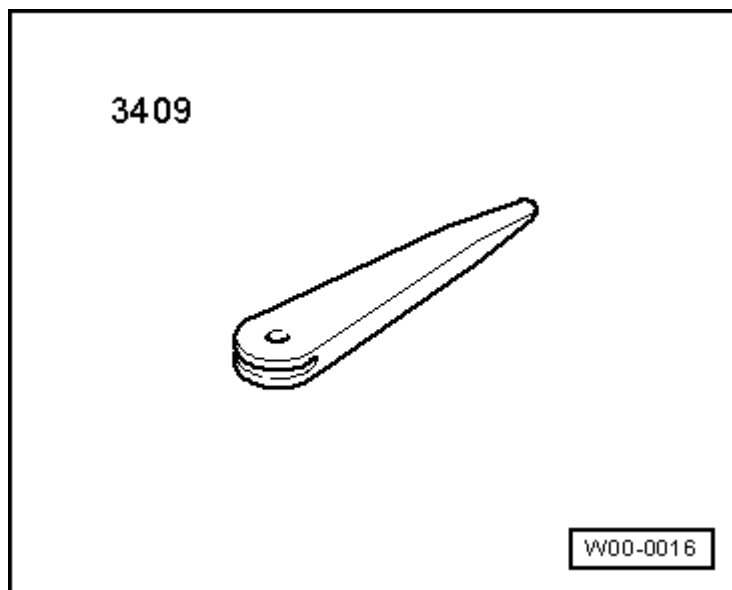


- ♦ Torque wrench -V.A.G 1783-

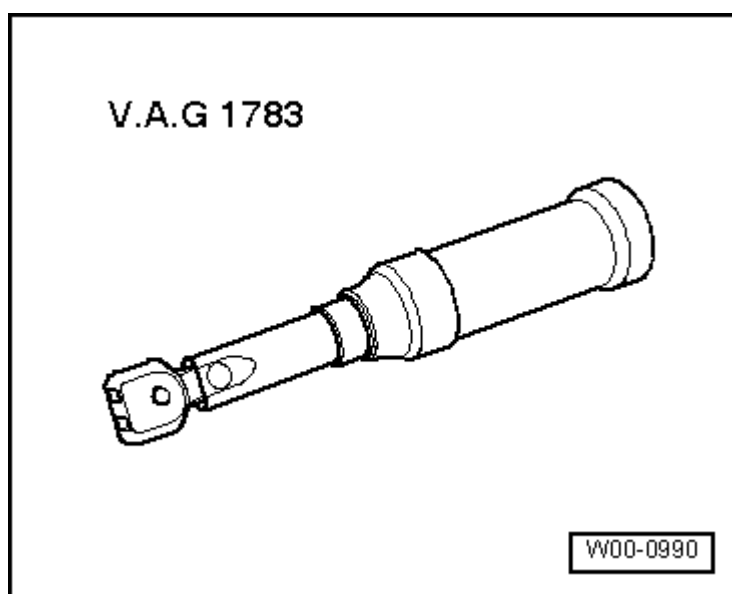

1 - Rear shelf with sun blind

- ♦ Removing
 - Retract sun blind -4-.
 - Remove roof end trim → Chapter.
 - Remove D-pillar trim (left and right) → Chapter.

Vehicles with folding rear

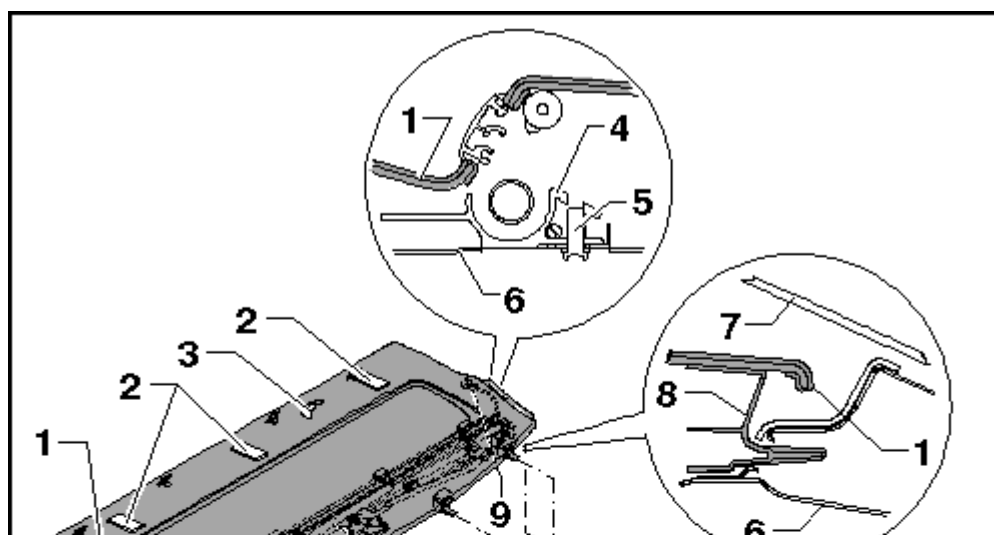

seat backrest

- Fold rear seat backrest forwards.

Vehicles with fixed rear seat backrest

- Remove rear seat bench → [Chapter](#).
- Remove rear seat backrest → [Chapter](#).
- Remove belt buckle with buckle bracket (right-side) → [Chapter](#).

All vehicles (continued)

- Unscrew bolts -5- (3x).
- Pull rear shelf -1- forwards and unclip clips -10- (4x) from cross member for rear shelf -6-.
- Pull rear shelf -1- with retainers and pins -8- (4x) out of cross member below rear window -7-.
- Unplug electrical connector -9-.

Vehicles with fixed rear seat backrest

- Unclip belt guide (rear centre) from rear shelf -1- → [Fig.](#).
- Insert belt with belt guide (rear centre) through cut-out -3- in rear shelf -1-.

All vehicles (continued)

- Remove rear shelf -1-.

♦ Installing

- Check that clips -10- (4x) are not damaged or deformed.

If clips are damaged or deformed they must be renewed.

- Before fitting rear shelf -1- make sure that clips -10- (4x) are correctly positioned.

Vehicles with fixed rear seat backrest

- Insert belt with belt guide (rear centre) through cut-out -3- in rear shelf -1-.
- Clip belt guide (rear centre) into rear shelf -1- → [Fig.](#).

Make sure that belt is not twisted.**All vehicles (continued)**

- Position rear shelf -1- on cross member for rear shelf -6-.
- Plug in connector -9-.
- Push rear shelf -1- to rear as far as it will go.
- Make sure that pins on retainers -8- (4x) are inserted into cut-outs in cross member below rear window -7-.
- Secure rear shelf -1- to cross member for rear shelf -6- with clips -10- (4x).
- Screw in bolts -5- (3x) and tighten to specified torque.

Make sure that the bolt heads are located in the narrow part of the cut-outs shaped like a key-hole.

Vehicles with fixed rear seat backrest

- Install belt buckle with buckle bracket (right-side) → [Chapter](#).
- Install rear seat backrest → [Chapter](#).
- Install rear seat bench → [Chapter](#).

Vehicles with folding rear seat backrest

- Return backrest to upright position.

All vehicles (continued)

- Install D-pillar trim (left and right) → [Chapter](#).
- Install roof end trim → [Chapter](#).
- Check that sun blind is functioning correctly.

2 - Child seat anchorage (3x)

- Only for USA and Canada
- Removing and installing → [Chapter](#)

- ❑ Cut-outs for child seat anchorage only provided on rear shelf of vehicles for USA and Canada

3 - Cut-out for belt guide

- ❑ Only on vehicles with fixed rear seat backrest

4 - Electric sun blind

- ❑ Removing and installing → **Item**

5 - Bolts (3x)

- ❑ Tightening torque: 4 Nm

6 - Cross member for rear shelf

7 - Rear window

8 - Retainers with pins (4x)

- ❑ → **Item**
- ❑ Fixed component of rear shelf -1-

9 - Connector for sun blind

10 - Clips (4x)

- ❑ Renew if damaged or deformed


Removing and installing centre belt guide (rear)

Removing:

- Unclip front retaining hook for belt guide (rear centre) -1-.
- To do so, insert removal wedge -3409- in between rear shelf -3- and belt guide (rear centre) -1-.
- Swivel belt guide (rear centre) -1- upwards approx. 45°.
- Detach belt guide (rear centre) -1- from rear shelf -3-.

Installing:

- First clip rear part of belt guide (rear centre) -1- into rear shelf -3-.
- Clip front retaining hook for belt guide (rear centre) -1- into rear shelf -3-.

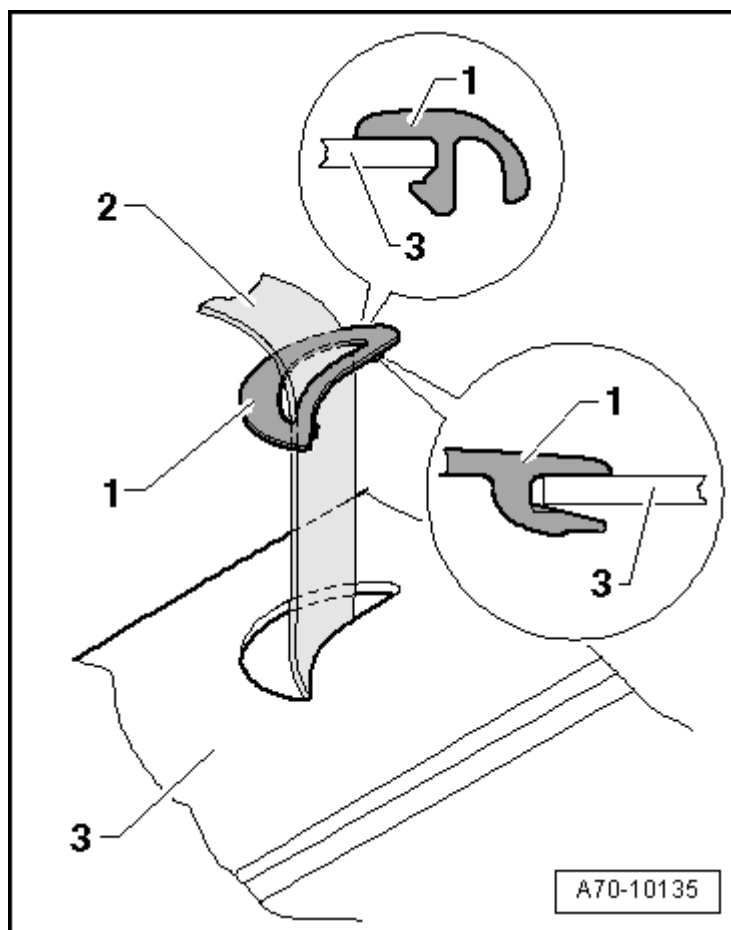

Removing and installing roof end trim

1 - Roof end trim

- ◆ Removing
 - Disengage roof end trim -1- at clips -4- (4x).
 - To do so, detach roof end trim -1- downwards.


Make sure you do not damage retaining hooks -3- on roof end trim -1-.

- Detach roof end trim -1-.

- ◆ Installing
 - Check that clips -4- (4x) are not damaged or deformed.

If clips are damaged or deformed they must be renewed.

- Before fitting roof end trim -1- make sure that clips -4- are correctly positioned.

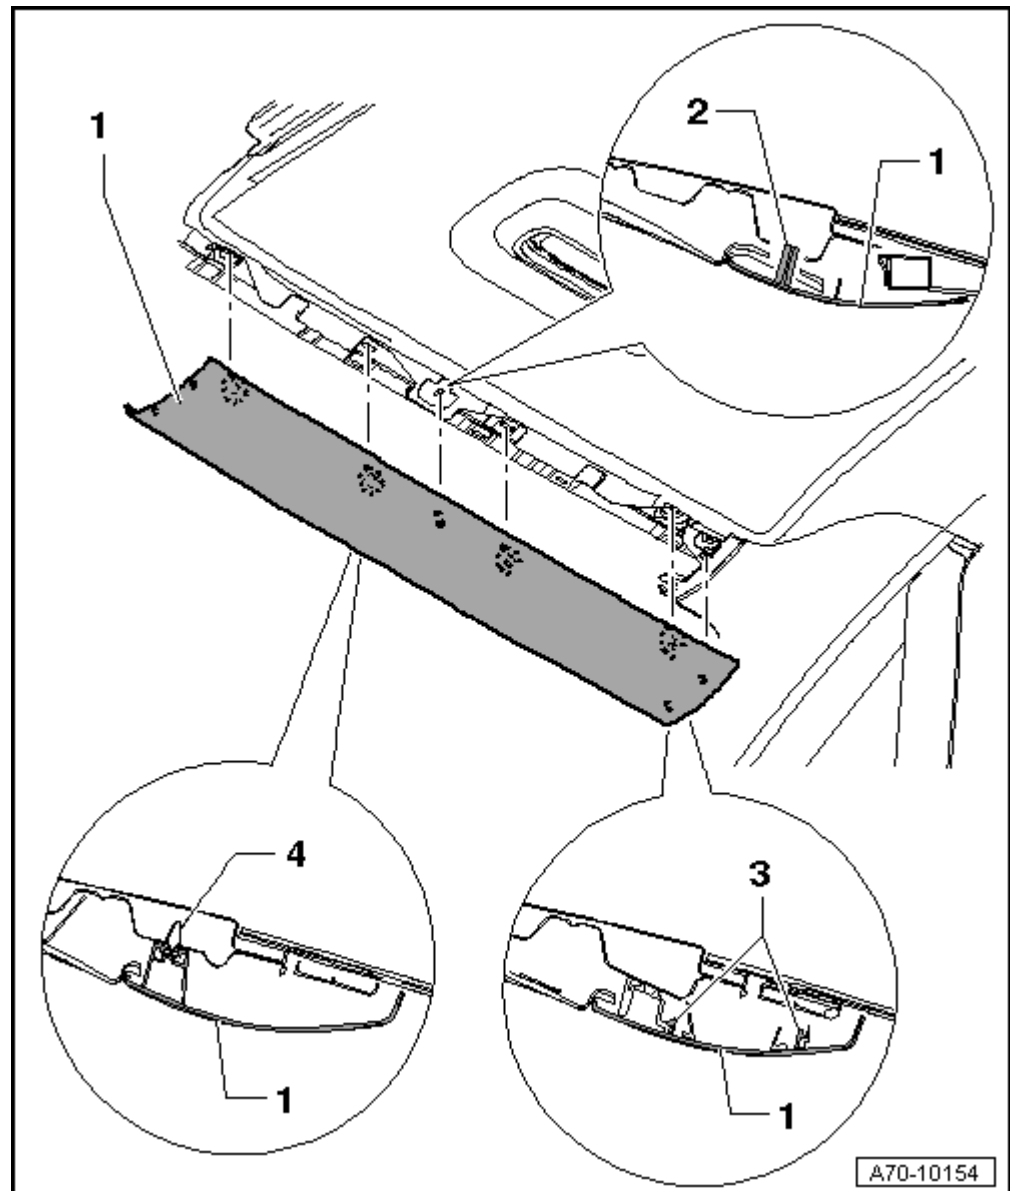

- Locate roof end trim -1- in position with pin -2-.
- Secure roof end trim -1- with clips -4- (4x) and retaining hooks -3-.

Make sure roof end trim -1- is securely engaged.

2 - Pin

- → Item
- Fixed component of roof end trim -1-

3 - Retaining hook

- → Item
- Fixed component of roof end trim -1-


4 - Clips (4x)

- Renew if damaged or deformed

Removing and installing D-pillar trim


Special tools and workshop equipment required

- ♦ Removal wedge -3409-

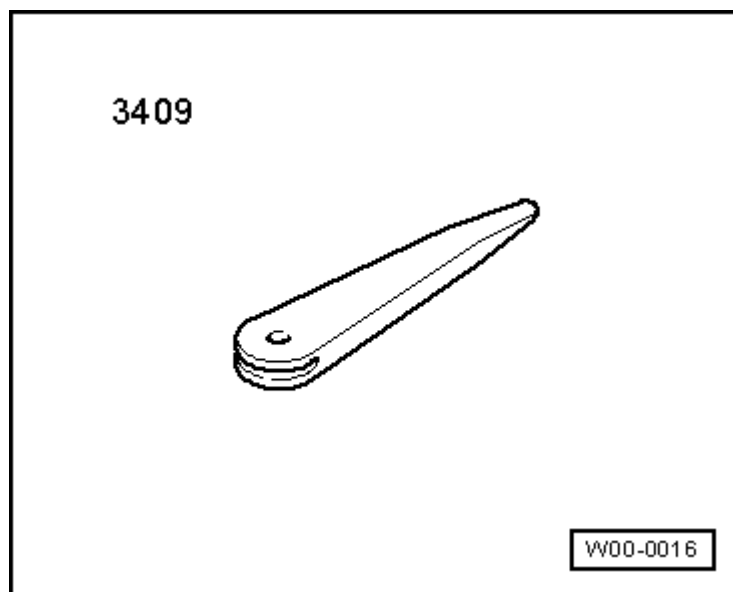


- ♦ Torque wrench -V.A.G 1783-

D-pillar trim

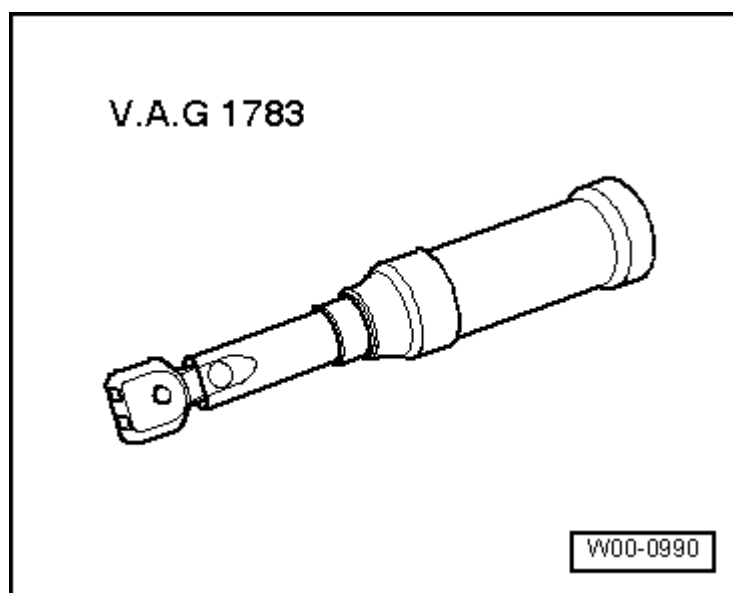

1 - D-pillar trim with bag tether (bolted on)

- ♦ Removing
 - Remove roof end trim
→ Chapter.
 - Remove bolt -2-.
 - Using removal wedge -3409-, carefully

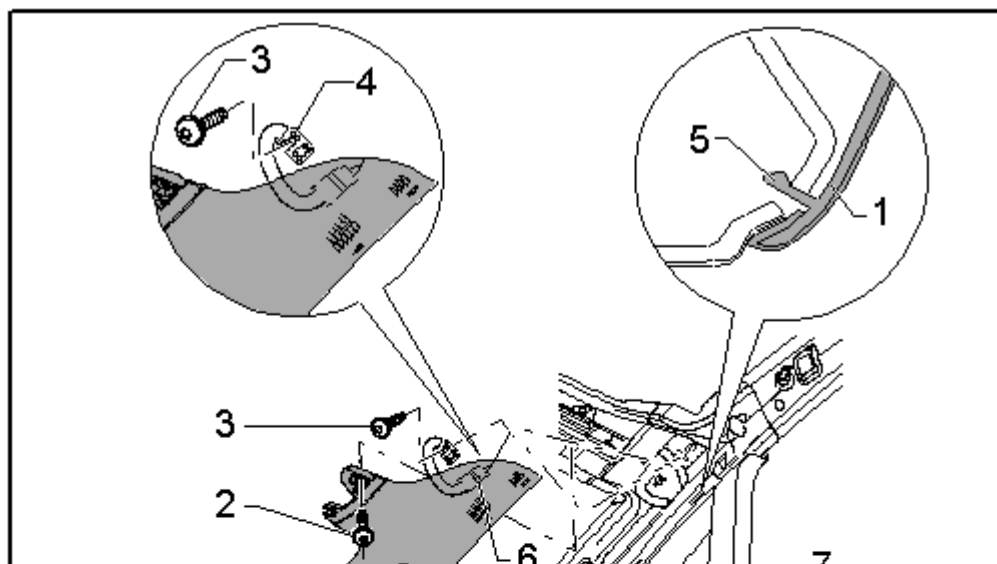

prise out D-pillar trim -1- at clip -6-, clips -9- (2x) and fasteners -5-.

Ensure that retaining hooks -5- are not damaged.



Note

- ◆ Bag tether -4- is secured to body shell with bolt -3-.
- ◆ Lower clip mounting on D-pillar trim -1- remains vacant.
- Remove bolt -3- from bag tether -4-.
- Pull D-pillar trim -1- upwards out of rear shelf -8-.

◆ Installing: Install in reverse order, paying attention to the following:

- Check that clip -6- is not damaged or deformed.

Renew D-pillar trim if clip -6- is damaged or deformed.

- Check clips -9- for damage or deformation.

Any damaged or deformed clips -9- must be renewed.

- Remove any residual locking compound from the threaded hole for bolt -2- and -3-. To do so, you can use a thread tap.

If the tapped hole is not cleaned, there is a danger of the new bolt becoming seized on fitting, thus preventing operation of the bag tether.

- Bolt on bag tether -4- with a new bolt -3- and tighten it to specified torque → **Item**.
- Before fitting D-pillar trim -1-, observe correct positioning of clips -6- and -9-.



WARNING

Make sure you do not trap curtain airbag when installing D-pillar trim -1-.

- Fit new bolt -2- and tighten it to specified torque → **Item**.

Make sure D-pillar trim -1- is securely engaged.

- Install roof end trim → **Chapter**.

2 - Bolt, self-locking

- Tightening torque: 3.5 Nm
- Always renew after removing
- Threaded hole for bolt must always be cleaned (e.g. with a thread tap).

3 - Bolt, self-locking

- Tightening torque: 3.5 Nm
- Always renew after removing
- Threaded hole for bolt must always be cleaned (e.g. with a thread tap).

4 - Bag tether

- → **Item**
- Fixed component of D-pillar trim -1-
- Check for damage
- If bag tether is damaged, renew D-pillar trim -1-
- D-pillar trim must be renewed if curtain airbag has been activated, as bag tether could have been damaged.

5 - Retaining hook

- → **Item**

- ☐ Fixed component of D-pillar trim -1-

6 - Clip

- ☐ If damaged or deformed, renew D-pillar trim

7 - C-pillar trim

8 - Rear shelf

9 - Clip (2x)

- ☐ Renew clip if damaged or deformed