

Amplifier -R12- BOSE (32-pin)



Note

Contacts which are not listed are not used.

Multi-pin connector, 32-pin

- 1 - Terminal 30
- 2 - Terminal 31
- 3 - Bass loudspeaker -R100- (+)
- 4 - Loudspeaker (-), rear left
- 5 - Loudspeaker (+), rear right
- 6 - Switched positive from radio -R- / navigation system with CD drive control unit -J401- / control unit with display for radio and navigation -J503-
- 7 - Signal earth from radio -R- / navigation system with CD drive control unit -J401- / control unit with display for radio and navigation -J503-
- 13 - Internal loudspeaker -R70- (-)
- 14 - Internal loudspeaker -R70- (+)
- 15 - Bass loudspeaker -R100- (-)
- 16 - Loudspeaker (+), rear left
- 17 - Loudspeaker (-), rear right
- 19 - Signal (front left) from radio -R- / navigation system with CD drive control unit -J401- / control unit with display for radio and navigation -J503-
- 20 - Signal (front right) from radio -R- / navigation system with CD drive control unit -J401- / control unit with display for radio and navigation -J503-
- 21 - Signal (rear left) from radio -R- / navigation system with CD drive control unit -J401- / control unit with display for radio and navigation -J503-
- 22 - Signal (rear right) from radio -R- / navigation system with CD drive control unit -J401- / control unit with display for radio and navigation -J503-
- 26 - Loudspeaker (-), rear right
- 27 - Loudspeaker (+), rear right
- 29 - Microphone input (+) from internal microphone -R74-
- 30 - Microphone input (-) from internal microphone -R74- (-)
- 31 - Loudspeaker (+), rear left
- 32 - Loudspeaker (-), rear left

